

## Recording Sonar Log



Pages button - Home Screen - Choose Sonar - Settings - Sonar


- The Record Sonar options box will pop up and allow the user to change the name of the file.
- **Save to the MEMORY CARD (default is internal).** All other settings can remain unchanged
- Once a file name is created and SAVE TO Memory Card is selected, select RECORD.
- The file name should flash periodically on the bottom of the display.
- To stop recording, press PAGES again, select Record Sonar and select STOP LOGGING.

## Detailed Lowrance™ Unit Settings (Recommended)

### Recording Sonar

Pages button - Home Screen - Choose Sonar

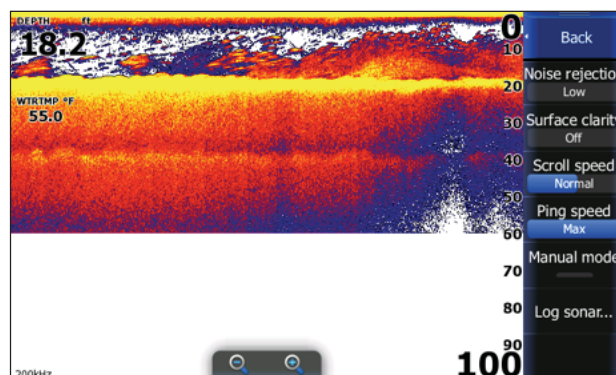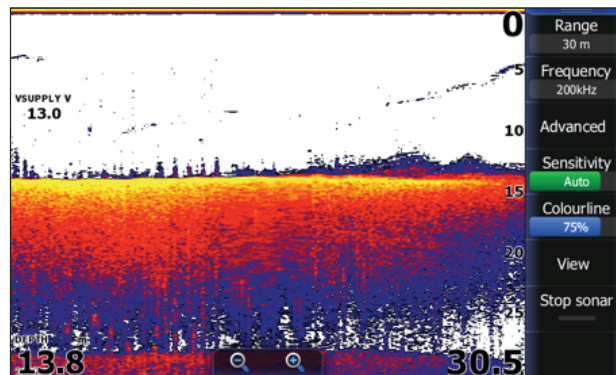

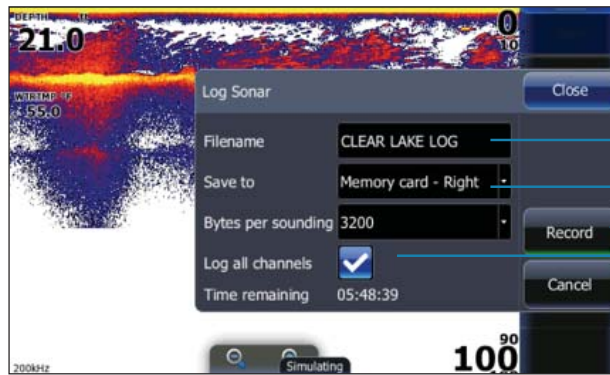

Specific the File Name of Sonar Log

The setting saves the Sonar Log to SD

Checking the Log All Channels box and then Clicking the Record button turns on the Sonar record function


- Home Screen
- Advanced
- Log Sonar
  - Filename: Name of File
  - Save to: Memory Card
  - Bytes per Sounding: 3200
  - Log all Channels: Checked
  - Click Record

### Change Traditional Sonar Frequency from Main Sonar Page


Home Screen – Choose Sonar



Choose Sonar


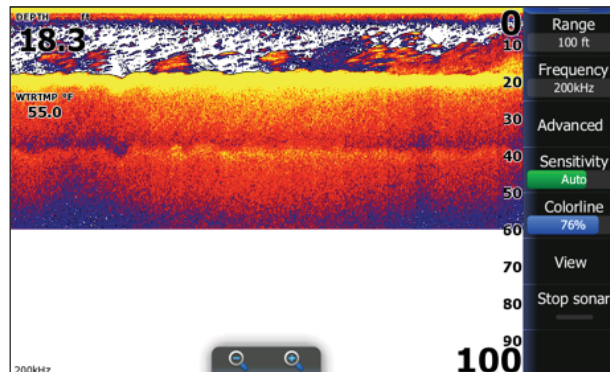



Choose Frequency

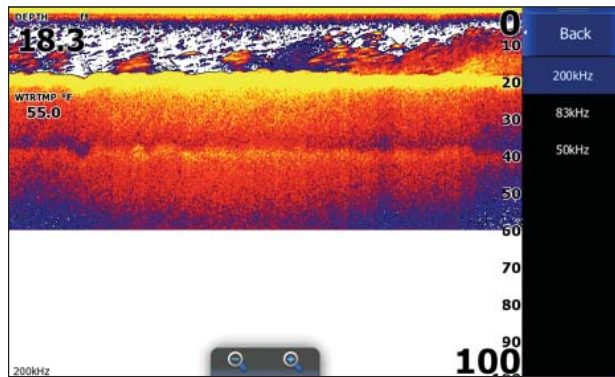

- Main Menu
- Sonar
  - Frequency
  - 200kHz


### Change Ping Speed from Main Sonar Page

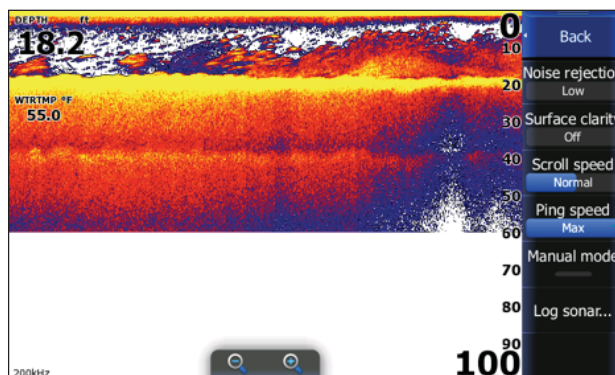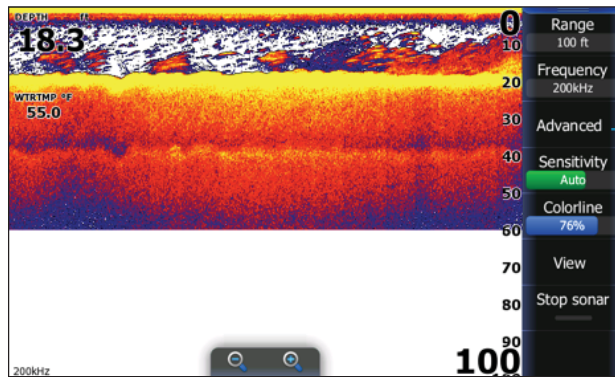

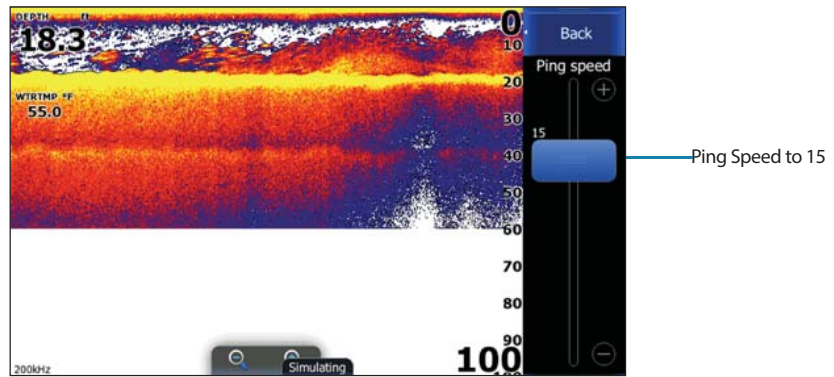

- Main Menu
- Sonar
  - Advanced
  - Ping Speed = 15

### Change Fishing Mode-Choose Settings on Left Side of Home Screen

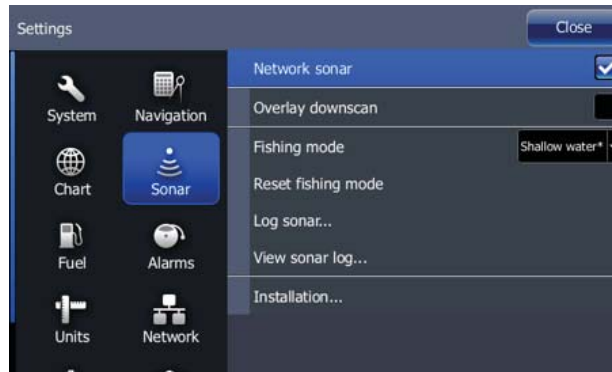

- Network Sonar – Checked (default)
- Overlay Downscan – Unchecked (default)
- Fishing Mode – Shallow Water